



FIG. 3



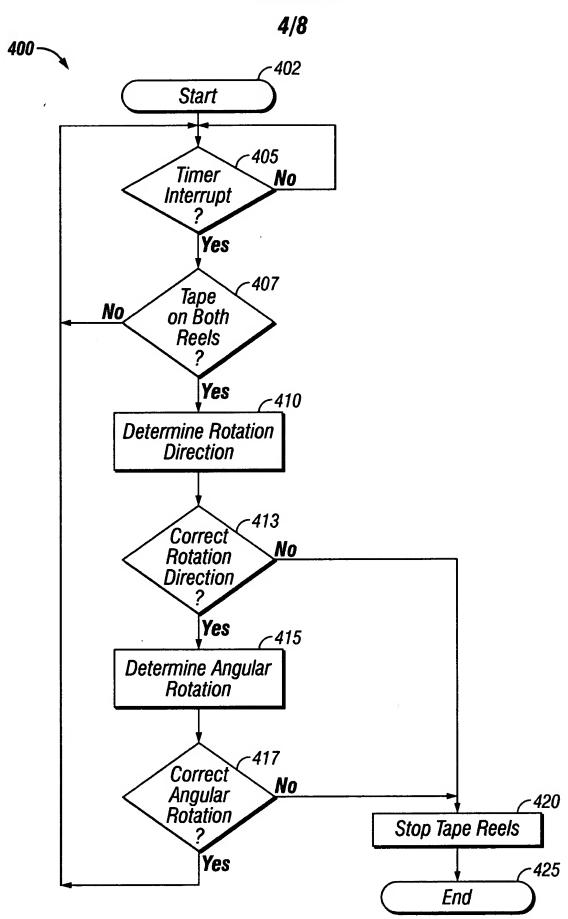

**5/8** *500* --502 Start -505 -508 C1-P1>N& C1-P1<-N& No No HD1 = -1HD1=1Yes Yes **~518** ~510 -514 CurDir1 = 1CurDir1 = -1 CurDir1 = 0520 P1=C1·525 -528 C2-P2<-N& C2-P2>N & No No HD2=1HD2 = -1Yes Yes -530 -538 -534 CurDir2=0 CurDir2=-1 CurDir2=1 -540 P2=C2-545 No CurDir1\*CurDir2 <0 Yes ~550


FIG. 5


Detect Tape Breakage

End

-560

*6/8* 

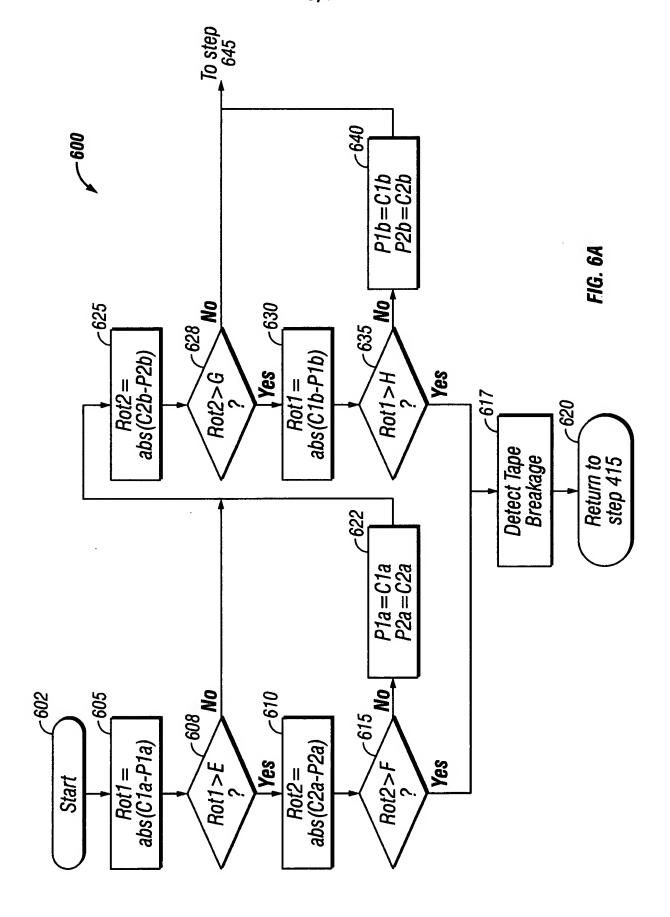

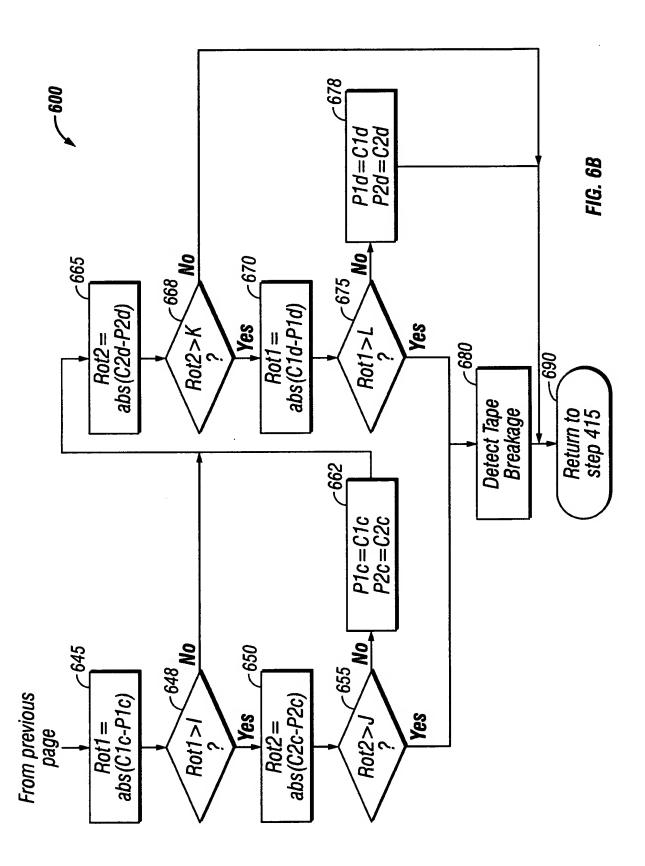

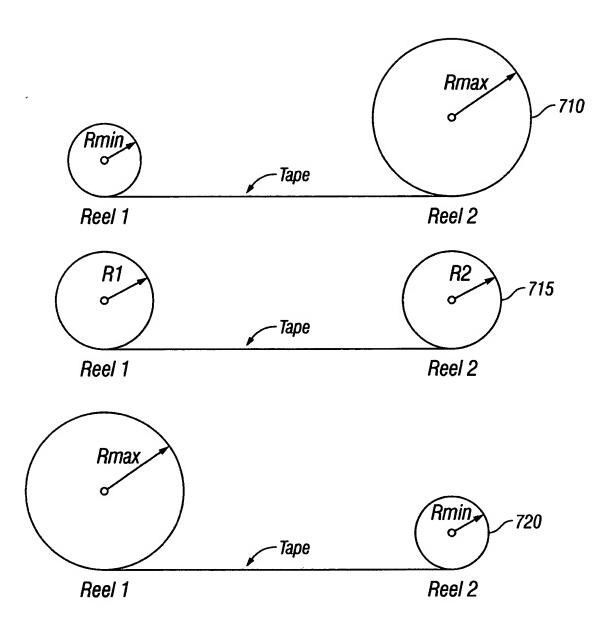


FIG. 7